

MENU Instruction

【MENU】 【UP】 【DOWN】 Change value 【ENTER】 Confirm

| MENU | Sub-menu | Function | |
|---|-------------------|---|---------------|
| Dmx512 | 001-512 | DMX address setting | |
| Shows (press Enter to change speed 0-99 at sub-menu.) | Auto Color | Color jump change | |
| | Auto Fade | Color gradual change | |
| | Auto Sudden | Color sudden change | |
| | Auto Strobe | Full on strobe | |
| | Wifi Mode | APP control | |
| Sound | Sound Mode1-4 | Sound control mode 1-4, press Enter to adjust sound sensitive. | |
| Color | Custom Color | Manual change color | |
| | Static Color | Select static color 1-32 | |
| Set | Dmx channel | 6/10CH channel selection | |
| | 2.4g wireless | Wireless ON/OFF | |
| | Infrared | Infrared ON/OFF | |
| | Display backlight | LCD backlight 0-100% | |
| | Lcd Close Time | LCD backlight close time, Open/5S/10S/15S/30S | |
| | Fan Speed | Auto/Slow/Middle/Fast speed | |
| | Restore Factory | 8888 | |
| | Manual | White balance adjustment | |
| | Temperature | Temperature condition, ON/OFF | |
| | Battery | Battery condition, ON/OFF | |
| | BackgroundColor | LCD background selection | |
| | Help | Name: 6 Color | Version: V5.1 |
| Run Time: | | User Time: | Temperature: |

User Manual

WI-HEX 612




Please read this manual carefully before operation

DMX Mode Function (6CH or 10CH mode for option)

| 6CH | Value | Function |
|-----|-------|---------------|
| 1 | 0-255 | Red dimming |
| 2 | 0-255 | Green dimming |
| 3 | 0-255 | Blue dimming |
| 4 | 0-255 | White dimming |
| 5 | 0-255 | Amber dimming |
| 6 | 0-255 | UV dimming |

| 10CH | Value | Function |
|---------|----------------------|----------------------------------|
| 1 | 0255 | Total dimming |
| 2 | 0-255 | Red dimming |
| 3 | 0-255 | Green dimming |
| 4 | 0-255 | Blue dimming |
| 5 | 0-255 | White dimming |
| 6 | 0-255 | Amber dimming |
| 7 | 0-255 | UV dimming |
| 8 | 0255 | Strobe |
| 9 | 0-8 | Light off |
| | 9-50 | Static mix color (32 kinds) |
| | 51-100 | Color jump change |
| | 101-150 | Color sudden change |
| | 151-200 | Color gradual change |
| | 201-220 | Sound control mode 1 |
| 221-240 | Sound control mode 2 | |
| 241-255 | Sound control mode 3 | |
| 10 | 0-255 | CH9 select color or change speed |

Remote control function (for option)

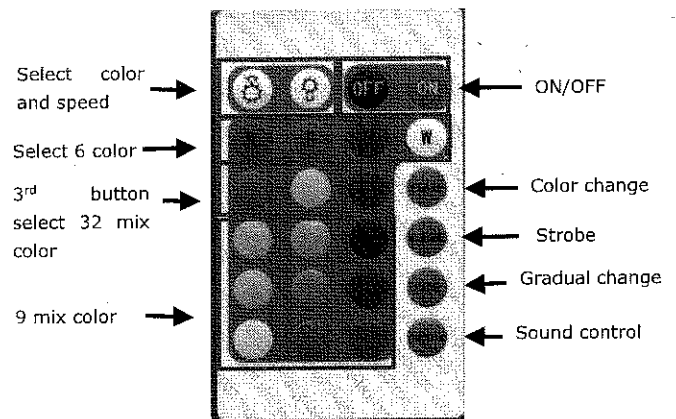

Remark:

1. Change speed by up/down when press Color change/strobe/gradual change button.
2. Select 3 sound control modes by up/down when press Sound control button.
3. Select mix color by up/down when press 32 mix color button.
4. Download the mobile phone APP by scan code below to control the light by wireless wifi.

